

7084724-00

Many thanks for your trust.

Congratulations on your purchase of this wine cooler. In buying this product, which is distinguished by its perfect user-friendliness, impeccable reliability and high quality, you have chosen a top class appliance. We wish you a lot of pleasure with your new wine cooler – and a lot of enjoyment from your wines.

 
The fewer the grapes produced in an area, the better the wine.

Poor, well-drained soils are best for good wine. The properties of the soil influence the vitality of the vine, which in turn affects the quality of the grape. Climate is another factor that is important for wine. Because light and air humidity are important for the development of the flavour of the wine.

The right environment for your wines.

A vine is an extremely sensitive plant. From the time it is planted to its maturing period and the time the grapes are harvested and the wine is made, it is dependent on three factors: light, air humidity and ambient temperature. This sensitivity continues even once the wine is bottled. To allow the flavour of the wine to fully develop or preserve the excellent aroma, the wine has to be stored perfectly – and your wine cooler offers the best conditions for this.

Description of appliance and equipment

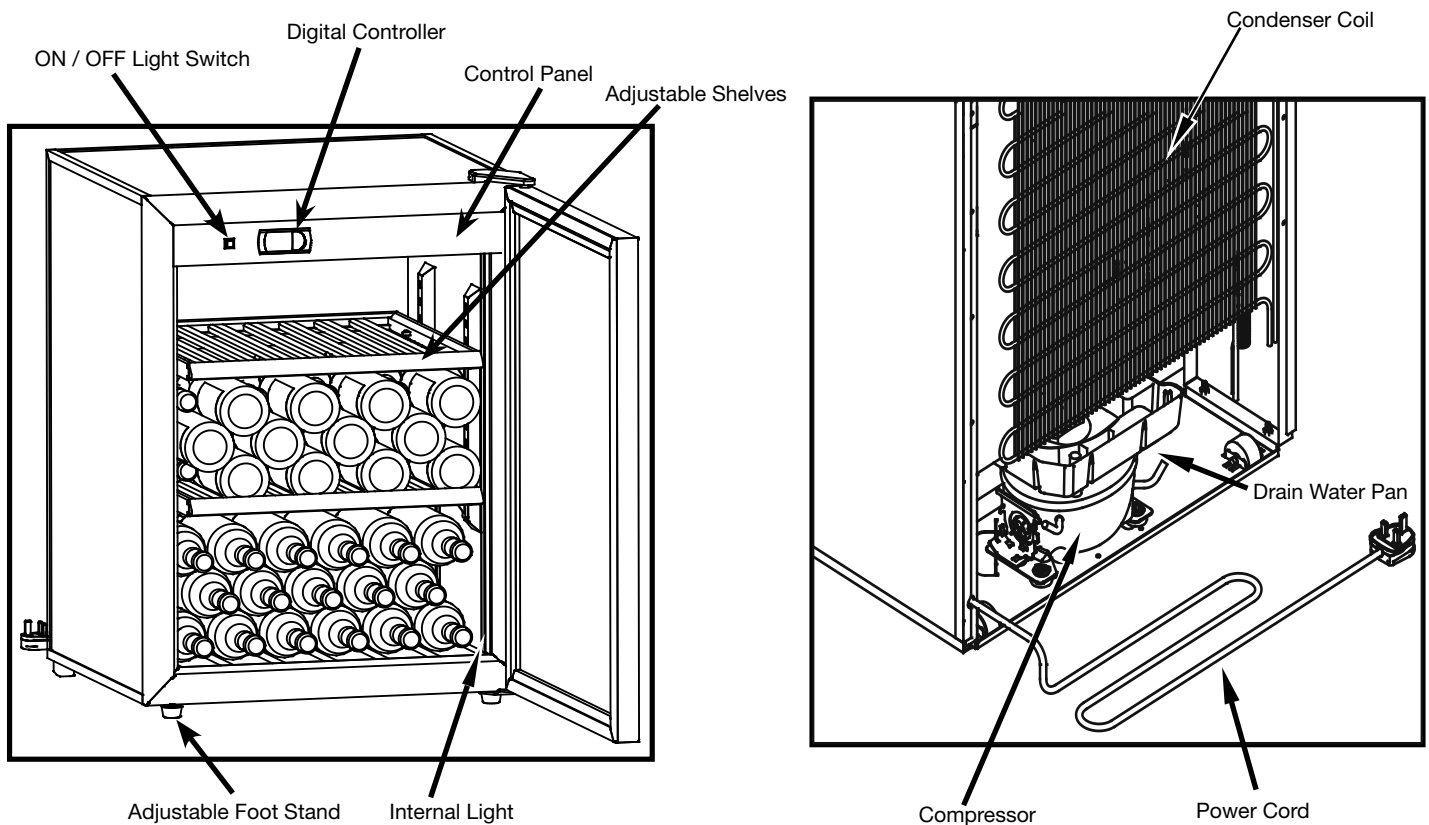

Safety instructions and warnings

- To prevent injury damage to the unit, the appliance should be unpacked and set up by two people.
- In the event that appliance is damaged on delivery, contact the supplier immediately before connecting to the mains.
- To guarantee safe from the mains if any fault occurs. Pull out the plug, switch off or remove the fuse.
- Disconnect the appliance from the mains if any fault occurs. Pull out the plug, switch off or remove the fuse.
- When disconnecting the appliance, pull on the plug, not on the cable.
- **Any repairs and work on the appliance should only be carried out by the customer service department, as unauthorized work could prove highly dangerous for the user. The same applies to changing the mains power cable.**
- Do not stand on the plinth, drawers or doors or use them to support anything else.
- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Avoid prolonged skin contact with cold surfaces or chilled/frozen food. This could cause pain, numbness be taken, e.g. gloves should be worn.
- **If you have a lockable appliance, do not keep the key near the appliance or within reach of children.**
- Do not use electrical appliances inside the appliance.
- Do not allow naked flames or ignition sources to enter the appliance. When transporting and cleaning the appliance ensure that the refrigerant circuit is not damaged. In the event of damage, make sure that there are no ignition sources nearby and keep the room well ventilated.

Shutting your appliance down

If your appliance is to be down any length of time, switch it off and disconnect the plug or remove the fuse. Clean the appliance and leave the door open in order to prevent unpleasant smells.

Disposal notes

The packaging is made of recyclable materials.

- Corrugated board/board
- EPS moulded parts
- Polythene sheets
- Polypropylene straps
- **Keep packaging materials away from children – polythene sheets and bags can suffocate!**
- Please return the packaging material to an official collection point.

Your old appliance: This contains some reusable materials and should be disposed of properly – not simply with unsorted household refuse.

- Disable discard appliances by removing the plug and cutting through the connection cable. Render the catch unusable so that children cannot become trapped inside.
- Make sure that the refrigerant circuit of an appliance that is no longer needed is not damaged before it is collected or handed at a municipal collection point.
- Details of the refrigerant used can be found on the type plate.
- Information on collection dates or collection points can be obtained from the waste disposal authorities or local council.



General information

The refrigerant circuit has been tested for leaks. The appliance is radio-suppressed to EN 55014 and thus complies with EC directive 87/308/EEC.

All type and models are subject to continuous improvement and the manufacturer therefore reserves the right to make modifications to the sharp, equipment and technology.

Setting up

 
- Avoid locating the appliance in direct sunlight or near heat sources such as an oven or a radiator.
- The floor should be level and even. You can compensate for an uneven floor by adjusting the adjustable feet.
- Standard EN 378 specifies that the room in which you install your appliance must have a volume of 1 m³ per 8 g of R 600a refrigerant used in the appliance, so as to avoid the formation of inflammable gas/air mixtures in the room where the appliance is located in the event of a leak in the refrigerant circuit. The quantity of refrigerant used in your appliance is indicated on the type plate on the inside of the appliance.
- The appliance is set to operate within specific ambient temperature limits according to its climate rating. These temperature limits should not be exceeded. The correct climate rating for your appliance is indicated on the type plate.

SN = +10 ° to 32 °C

SN - ST = +10 °C to +38 °C

Fitting dimensions (MM)


- Adjust to recess height using the 2 adjustable feet on the underside of the appliance.

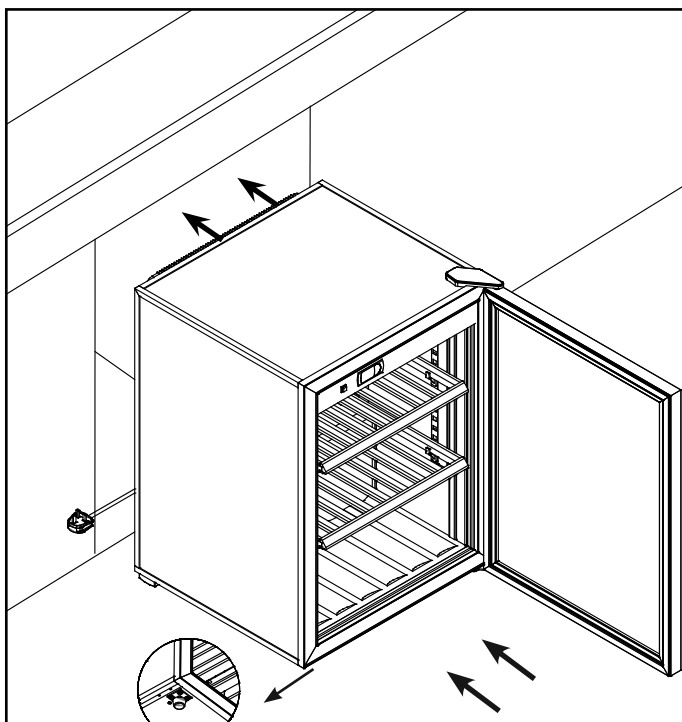

Electrical requirement

Power supply (AC) and voltage at operating point must comply with the details on the type plate. The socket must be fused with a 10 a fuse or higher, it must be away from the rear the appliance and must be easily accessible.

 Operating and control elements

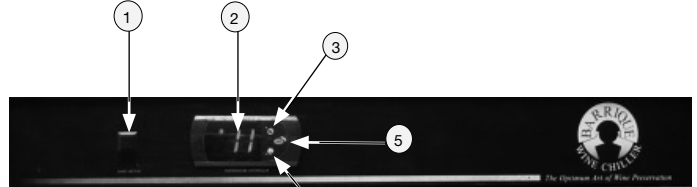


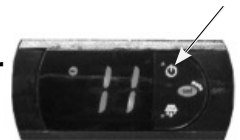 
Operating elements

- ① **ON/OFF Light Switch**
- ② **Temperature Display**
- ③ **Compressor ON/OFF**
- ④ **Defrost ON/OFF**
- ⑤ **Set/Mute**

Switching the appliance on and off

You are recommended to clean the appliance before switching it on for the first time (see “**Cleaning**”). Connect the appliance to the mains – the appliance is on. The alarm may sound when the appliance is switched on for the first time and when the appliance is warm. Press the ⑤ “**SET/MUTE**” Button to silence the alarm. The temperature display will also flash. Alarm will automatically resets when cabinet is cool.



- **To switch the compressor off:** Keep the ③ “**ON/OFF**” button pressed for 3 sec. so that the ② will continuous blinking.
- **To switch the compressor on:** Press the ③ “**ON/OFF**” button. The  symbol will light to indicate that the compressor is activated.

 


Setting the temperature

The temperature of compartments can be set separately.


Press the SET  button for 3 sec.

- **To increase the temperature :**
Press the UP  button.
- **To reduce the temperature :**
Press the DOWN  button.
- While you are entering the temperature, the set temperature will flash on the display.
- You can change the settings in increments on 1 °C briefly pressing the button again.
- The electronic controls will switch over automatically about 5 seconds after the last time you pressed the button, and the actual temperature will be displayed.
- Factory setting temperature = +10°C
Customers setting = +6°C to +18°C

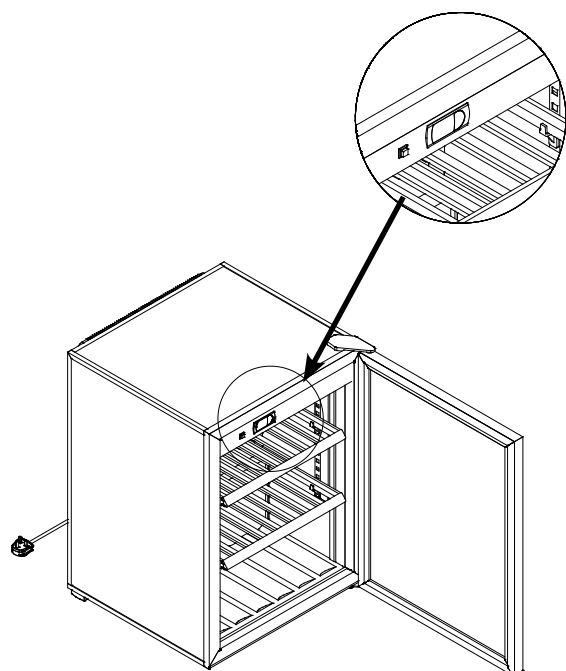

Interior light

 
A light bar is integrated into the right hand inside the wall. The interior light can be switched in and off using the ① “Light” button.

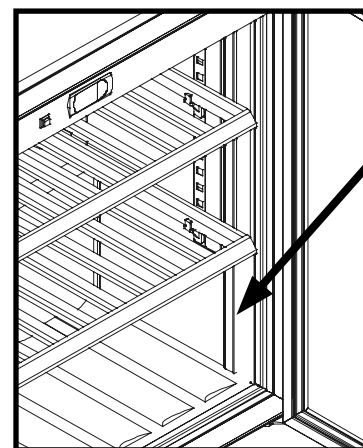

Caution – class 1M laser radiation. When cover is removed, do not look directly at light through optical instruments.


The interior light may only be replaced by the customer service technician or by competent skilled personnel!

 Furthermore, the brightness of the lighting can be adjusted by pressing the button for the brightness selection.

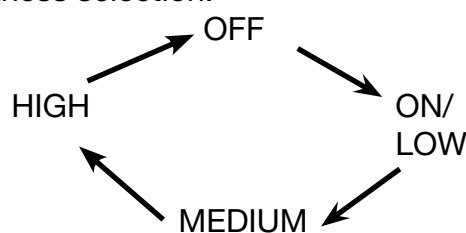

Air exchange with activated carbon filter

 The way in which wines continue to mature depends on the ambient conditions. The quality of the air is therefore decisive for preserving the wine. For this reason, an activated rear wall of both the upper and lower compartments. We recommend that you replace the filter once a year. Filters can be obtained from your dealer.

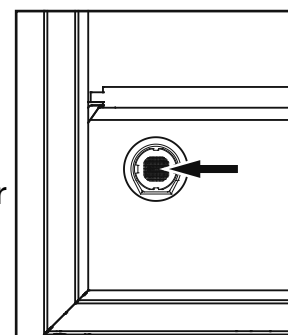

Changing the filter: Take the filter by the handle. Turn it 90° to the left or right and remove.

Inserting the filter: Insert with the handle in a vertical position. Turn it 90° to the left or right until it clicks into place.

English

Defrosting

The appliance defrosts automatically. The water that forms on the rear wall drains into a reservoir at the back of the appliance and evaporates automatically through the compressor heat.

Cleaning

Before cleaning always switch off the appliance. Pull out the mains plug or remove/unscrew the fuse.

Do not use steam cleaners because of the risk of injury and damage.

 
- Do not use abrasive sponges or scourers, do not use concentrated cleaning agents and never use cleaning agents containing sand, chloride or acid or chemical solvents, as these would damage the surfaces and could cause corrosion.
- Use a glass cleaner to clean the glass surfaces and a commercially available stainless-steel cleaning agent for the stainless-steel surfaces.
- Clean the inside and equipment with luke-warm water and a little detergent, with the exception of the wooden trims on the grid shelves.
- Ensure that no cleaning water penetrates into the electrical components.
- Dry all parts well with a cloth.
- Do not remove the type plate from the inside of the appliance; it is important for after-sales servicing.

Malfunctions

Your appliance is designed and manufactured for lengthy, reliable reliable operating life with no malfunctions. IF a malfunction nonetheless occurs during operation, check whether it is due to an operating error. Please note that even during the warranty period the resultant servicing costs in this case will have to be borne by the owner.

You may be able to rectify the following faults by checking the possible causes yourself:

- **Appliance does not function:**
 - Check that the appliance is properly connected to the mains
 - Is the socket fuse intact?
- **Loud running noise:** Check that the appliance is standing firmly on the ground. Please note that it is impossible to avoid flowing noises in the refrigeration circuit.
- The temperature inside your wine cooler is too warm: Check the setting in accordance with the section **“Setting the temperature”**
 - Does the separately installed digital controller show the correct reading?
 - Is the air extraction working properly?
 - Is the wine cooler too close to heat source?
- Please note that, as can happen with other forms of storage, slight mould may form depending on the type of adhesive on the labels. This can be rectified by carefully cleaning any adhesive residues off the bottles.

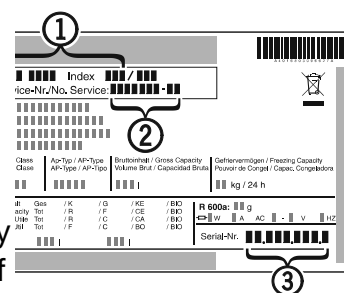


If none of the above cause apply and you cannot rectify the fault yourself, contact the nearest customer service department stating the **type ①** of appliance, **index ②** and **appliance number ③** as indicated on the type plate. The type plate is located on the left hand backside of the wall.


Storage diagram

For 750 ml Bordeaux bottles

 
- Small Unit : 57 bottles.**
- Medium Unit : 121 bottles.**
- Big Unit : 169 bottles.**

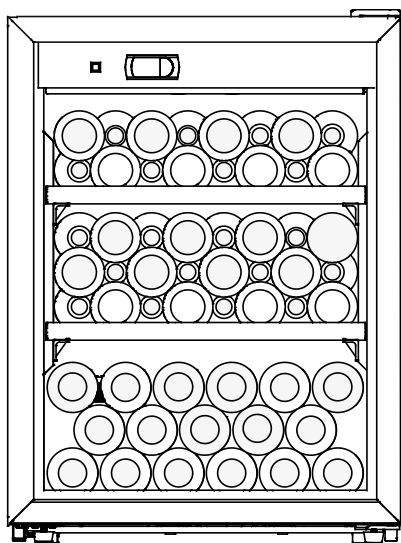

GC57

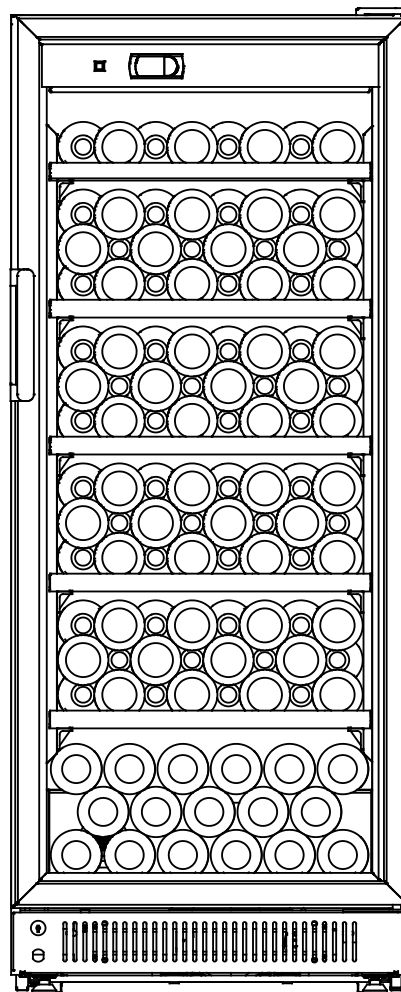 

GC121

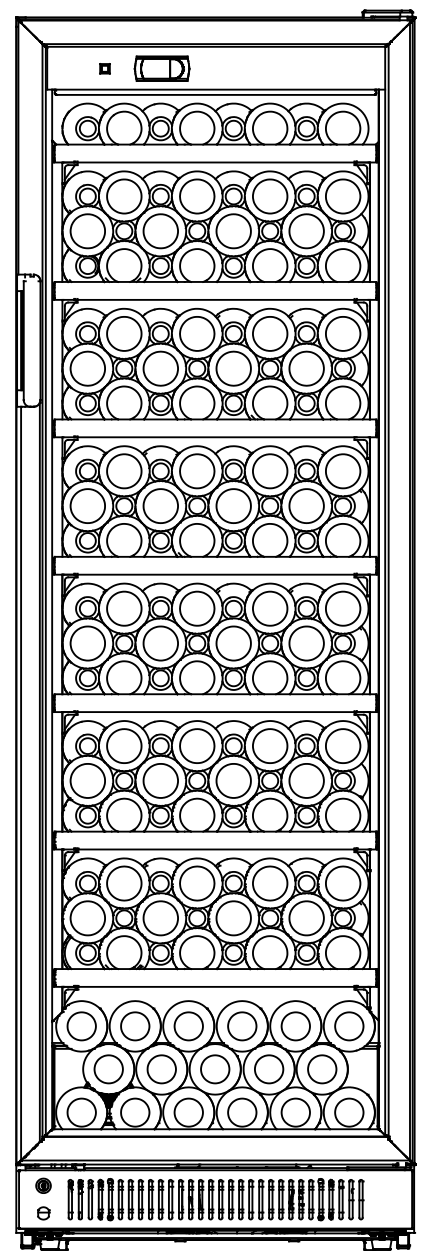 

GC169 & G169

Liebherr Appliances Kluang Sdn Bhd (153177-U)

No.7 Jln Firma 2 , Kaw.Perind.Kluang II, KM7, Jln Mersing, 86007 kluang, Johor, West Malaysia.
www.liebherr.com.my